

Control Panel : DE-N60WV / N50WV

Process indicator

Indicates current operation in drying mode by blinking the course name and lamp.

● When operation is paused or lid is opened, these will be kept lit.

● During operation while the humidity sensor is detecting volume and materials of clothes:



● Characters of selected course name will blink.

● In "In 10 minutes" or "Soft Keeping" mode, operation course name will light.

● During fan operation for cooling clothes and machine body:

あと10分

● Fan operation time will change depending on operation course.

Course	Fan operation time
"Before hang out", "15 minutes"	3 minutes
"Standard", "Wind dry", "Finish"	5 minutes
"Sterilization", "30 minutes", "60 minutes"	10 minutes

Filter clogging sign

Clogging of the filter is indicated by blinking of lamp.

● If the lamp blinks, be sure to replace filter.

● If you open the lid while the lamp is blinking, buzzer will sound for 5 seconds and lamp will go off.

● This will not function in "Before hang out", "15 minutes", "30 minutes", "60 minutes" and "Wind dry" courses.

● When the power is turned ON, if the sign lamp blinks and buzzer sounds, make sure that the filter is not clogged.

フィルター目づまり

If you do not want to sound the finish buzzer:

After turning the power on, if the start button is pressed continuously for 3 seconds or more, finish buzzer will not sound. If the button is pressed for 3 seconds or more again, buzzer will sound as originally set. (Setting cannot be done during operation.)

Finish buzzer will start to sound a short time (within 15 seconds) after operation ends.

Course button

Courses which operate with air hatch closed.

● Each time the button is pressed, course changes.

● In "Sterilization (75°C)" course, heater level will automatically be set to "High".

● After operation is started, the course change cannot be performed.

Start/Pause button

This button is used to start or pause an operation that was selected by the course button or Hatch course button.

● If you open the lid during operation, operation will stop. When you continue the operation, close the lid again and press the Start button.

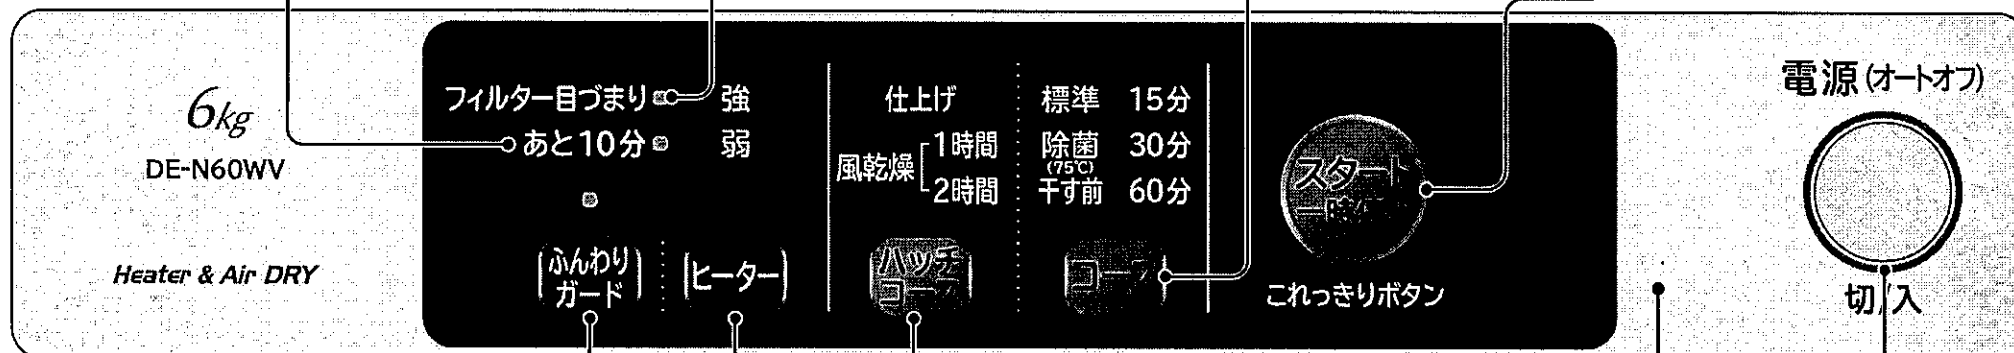


Diagram shows DE-N60WV.

Soft Keeping button

"Soft Keeping" function performs fan operation for 12 seconds at intervals of about 5 minutes for 2 hours after drying is completed to keep clothes soft.

● During "Before hang out" or "Wind dry" course, "Soft Keeping" does not operate.

● Each time the button is pressed, lamp alternates between on and off. To omit the operation, turn off the lamp. To operate the function, turn on the lamp.

Heater selection button

Pressing the button switches the heating level between High and Low.

● When "High" and "Low" lamp are off, fan operation is performed.

● Once the operation is started, heater cannot be switched.

● Memory function is provided for "High" and "Low" mode: When the power is turned on, the most recent operation lamp will light.

Hatch course button

Courses which operate with the air hatch kept open.

● Each time the button is pressed, course changes.

● In "Wind dry" course, "High" and "Low" heater lamps go off.

● After starting the operation, course cannot be changed.

Power switch

Pressing the button turns the power on.

● Power will automatically be turned off five minutes after "Dry" or "Soft Keeping" operation is finished, or when the power is left turned on. (Auto-off function)

● When lamp of "Filter clogging sign" blinks, power will not turn off for 12 hours.

● When the power is turned on, if the filter clogging sign lamp blinks and buzzer sounds, make sure that the filter is not clogged again.

If filter was clogged last time, even if the filter has been cleaned, filter clogging sign lamp will blink and buzzer will sound to confirm the filter clogging status again when the power is turned on.

● When "Standard", "Finish", "High" heater or "Soft Keeping" operation is set, reception sound will output two times in succession. (For indicating reference point.)